



Quick-Start Guide Power Injector

PN: 506



Single Channel Version
(For EscapeKeeper)



Four Channel Version
(FlexMax / Other)

EscapeKeeper Setup



You may need to update your EscapeKeeper's firmware before you can use this board. Firmware version 2.14 or higher is required.

The latest firmware and full manual can always be downloaded at:

help.frightideas.com/504

Initial Setup

Once your firmware is updated, you will need to go through the initial setup to select your puzzle mode and other puzzle options if you haven't already. Then you'll have to enter the Indication Menu to select how you'd like to use this board. Please see the *Indication Options in Depth* and *Selecting Indication Options* sections in the full manual available at the link above for those instructions.

Compatibility

This product is compatible with the 2018 model EscapeKeeper as long as it has the latest firmware. It should have the AUX connector next to output 3. It will not work with the EscapeKeeper JR or earlier EscapeKeepers.

FlexMax Setup

To use this board to power servos with the FlexMax you have to connect it as shown on the back page and connect an appropriate power supply. The power supply connected to this board should be 5 or 6 volts.



Quick-Start Guide Power Injector

PN: 506



Single Channel Version
(For EscapeKeeper)



Four Channel Version
(FlexMax / Other)

EscapeKeeper Setup



You may need to update your EscapeKeeper's firmware before you can use this board. Firmware version 2.14 or higher is required.

The latest firmware and full manual can always be downloaded at:

help.frightideas.com/504

Initial Setup

Once your firmware is updated, you will need to go through the initial setup to select your puzzle mode and other puzzle options if you haven't already. Then you'll have to enter the Indication Menu to select how you'd like to use this board. Please see the *Indication Options in Depth* and *Selecting Indication Options* sections in the full manual available at the link above for those instructions.


Compatibility

This product is compatible with the 2018 model EscapeKeeper as long as it has the latest firmware. It should have the AUX connector next to output 3. It will not work with the EscapeKeeper JR or earlier EscapeKeepers.

FlexMax Setup

To use this board to power servos with the FlexMax you have to connect it as shown on the back page and connect an appropriate power supply. The power supply connected to this board should be 5 or 6 volts.

Wiring Diagrams

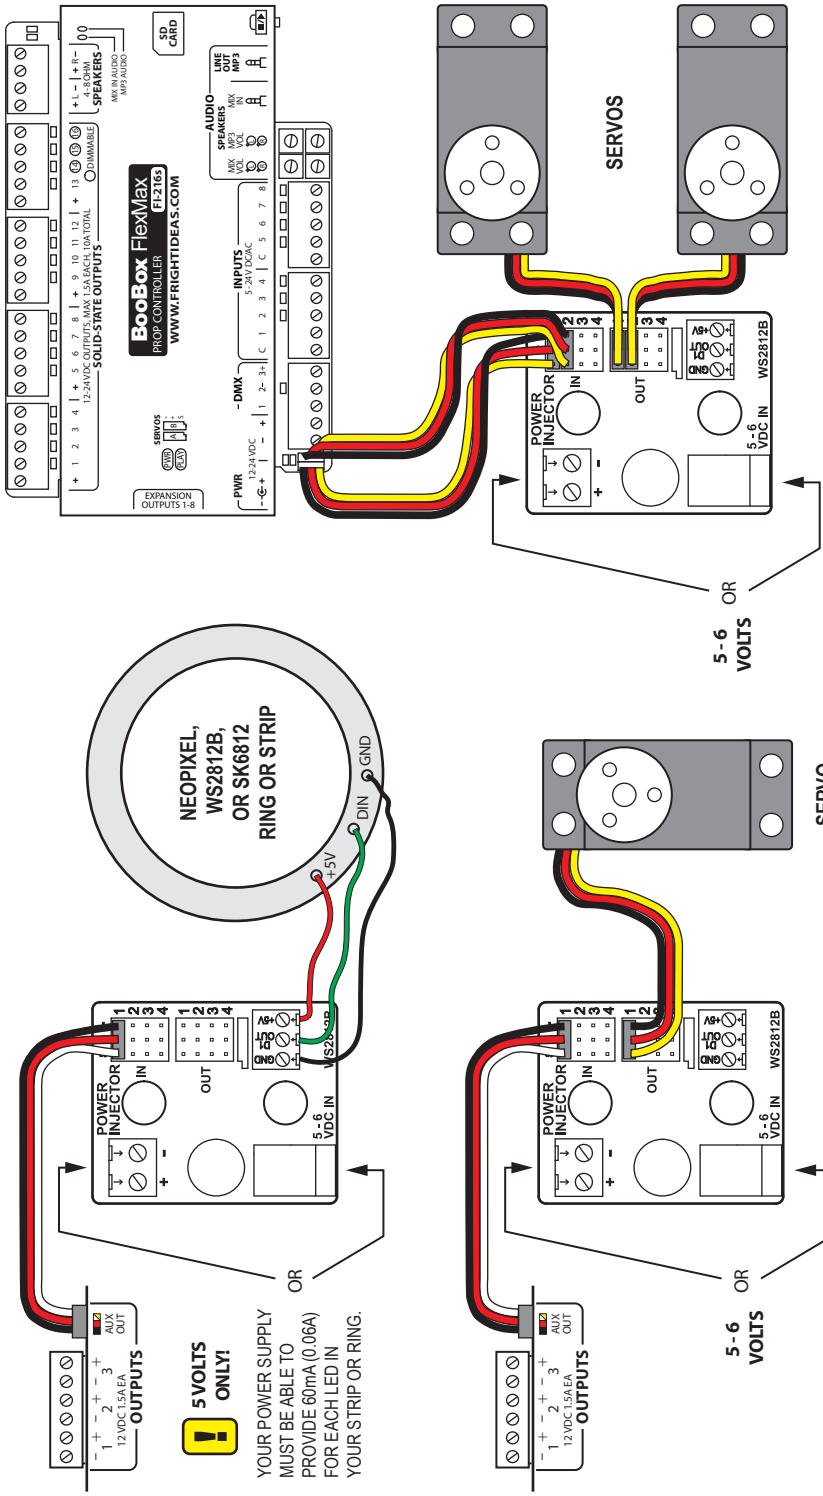

Wiring Diagrams

